


getting to know your kindle

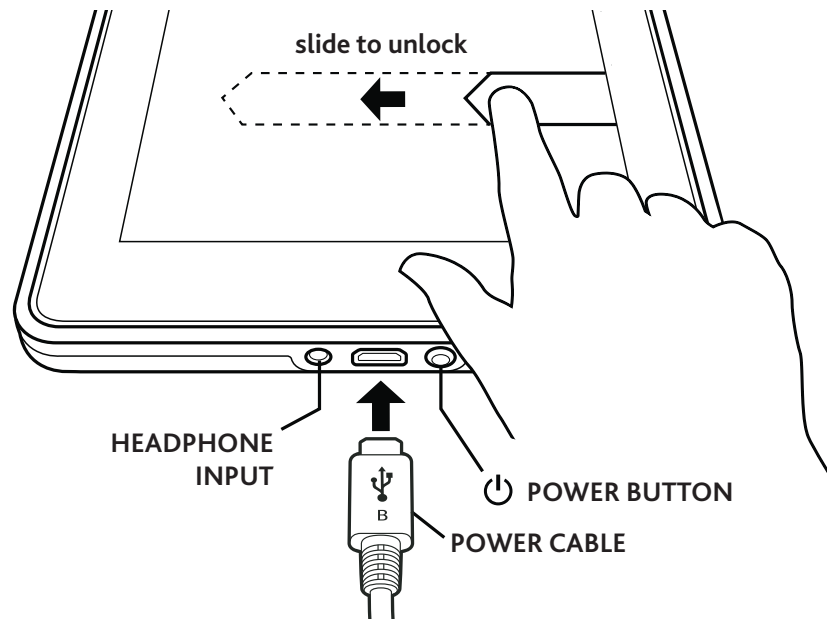

To charge your Kindle, connect it to the power cable as shown. Then connect the power adapter at the opposite end of the power cable into a wall outlet.

To start your Kindle, press the power button

To unlock your Kindle, press on the yellow arrow. Drag the arrow across the screen to the left.

To learn more about your Kindle, select Kindle User's Guide on the Home screen.

For Kindle customer support, visit www.amazon.com/kindlesupport.

important product information

For safety, compliance, recycling, and other important information regarding your Kindle, please refer to the Kindle User's Guide on your Kindle. The Kindle User's Guide is also available online at www.amazon.com/kindledocuments.

Amazon Terms and Policies

Before using the Kindle device, please read the terms located at www.amazon.com/kindlefireterms and all rules and policies for the Kindle device and services related to the device (including, but not limited to, the Amazon privacy notice located at www.amazon.com/privacy and any rules or usage provisions specified on the www.amazon.com website or the Kindle Store) (collectively, the "Agreements"). By using the Kindle device you agree to be bound by the terms of this Agreement.

If you do not accept the terms of the Agreements, you may return the Kindle device and associated software (with all original packaging, manuals, and accessories) within thirty (30) days of purchase for a refund of its purchase price in accordance with the Kindle return policy.

Your Kindle is covered by a One-Year Limited Warranty. Details are available at www.amazon.com/kindlewarranty.